


first of all disconnect your battery!! very important

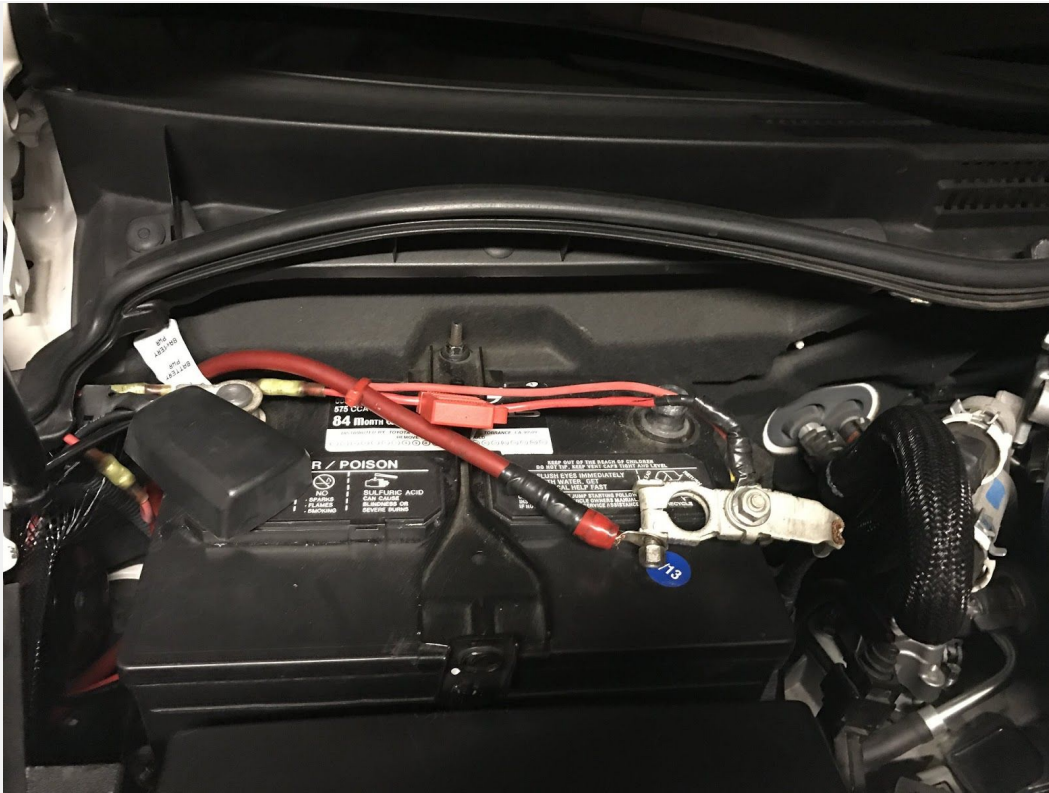


then this is the box that holds the ECU



remove 3 bolts as shown



start pulling everything you can pull! be gentle

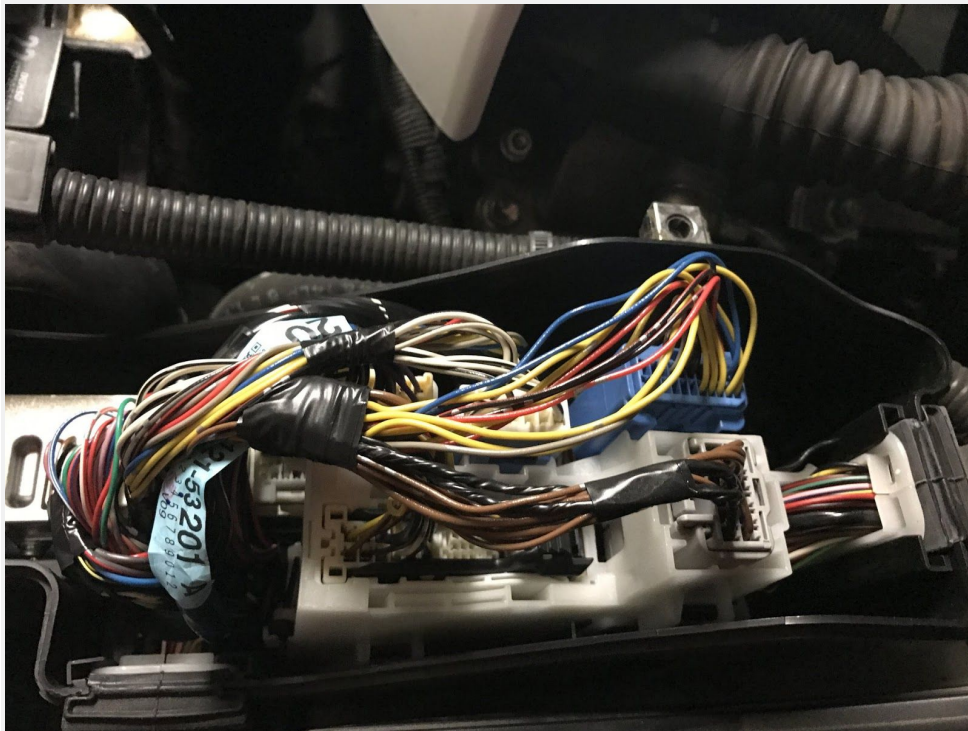





yeah you need to take this out because its in the way



so insert a small screwdriver or something similar

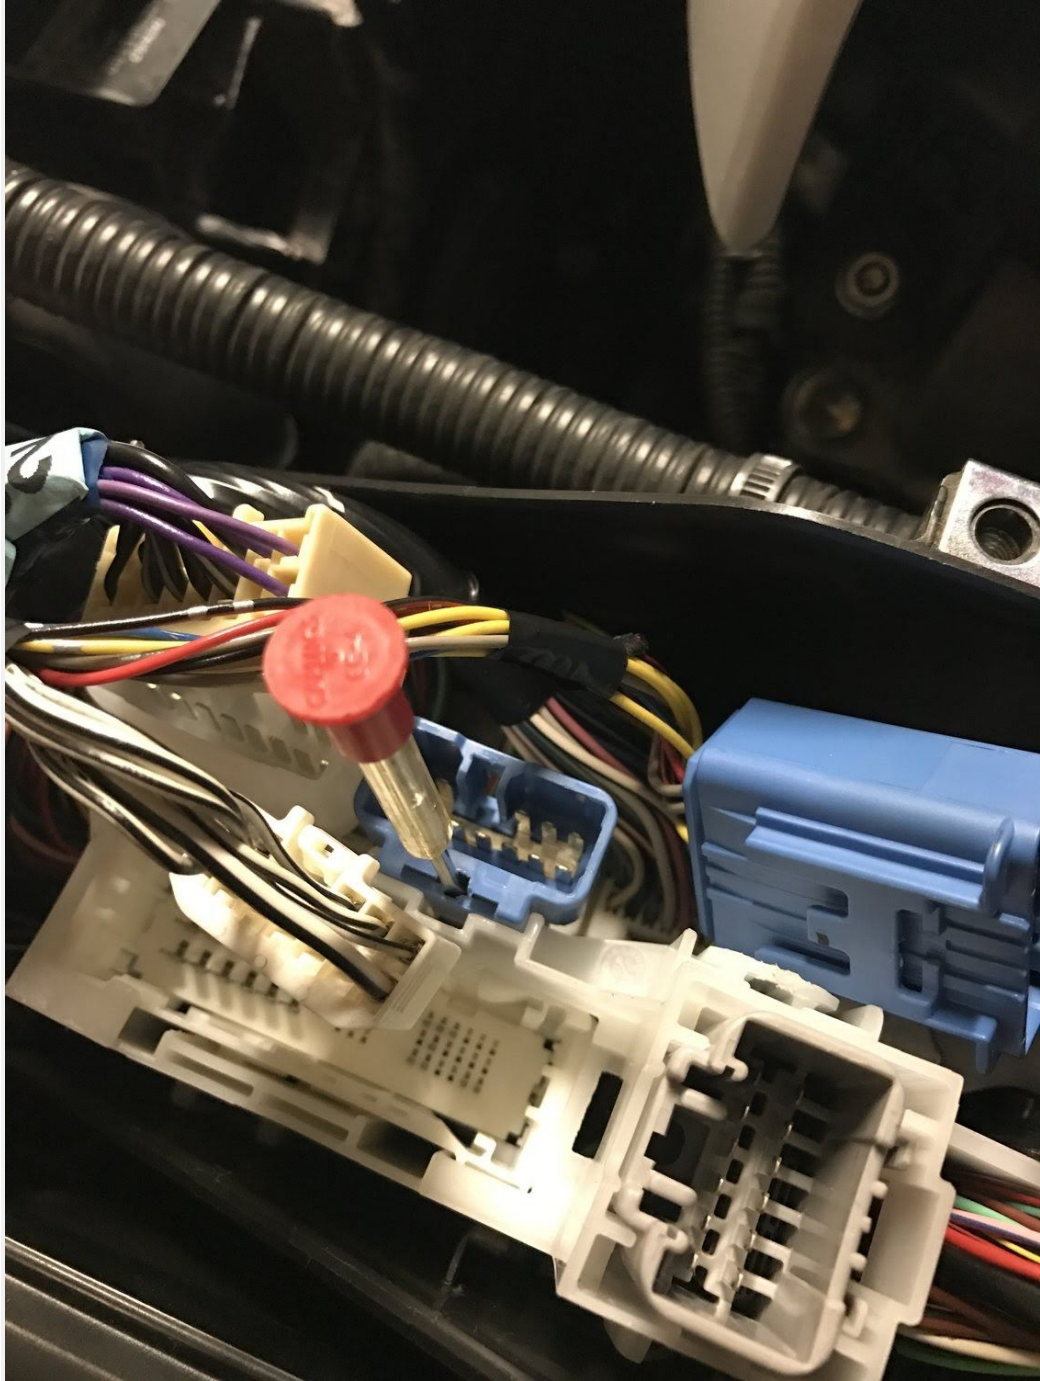

pull it towards you and pull the blue thing at the same time

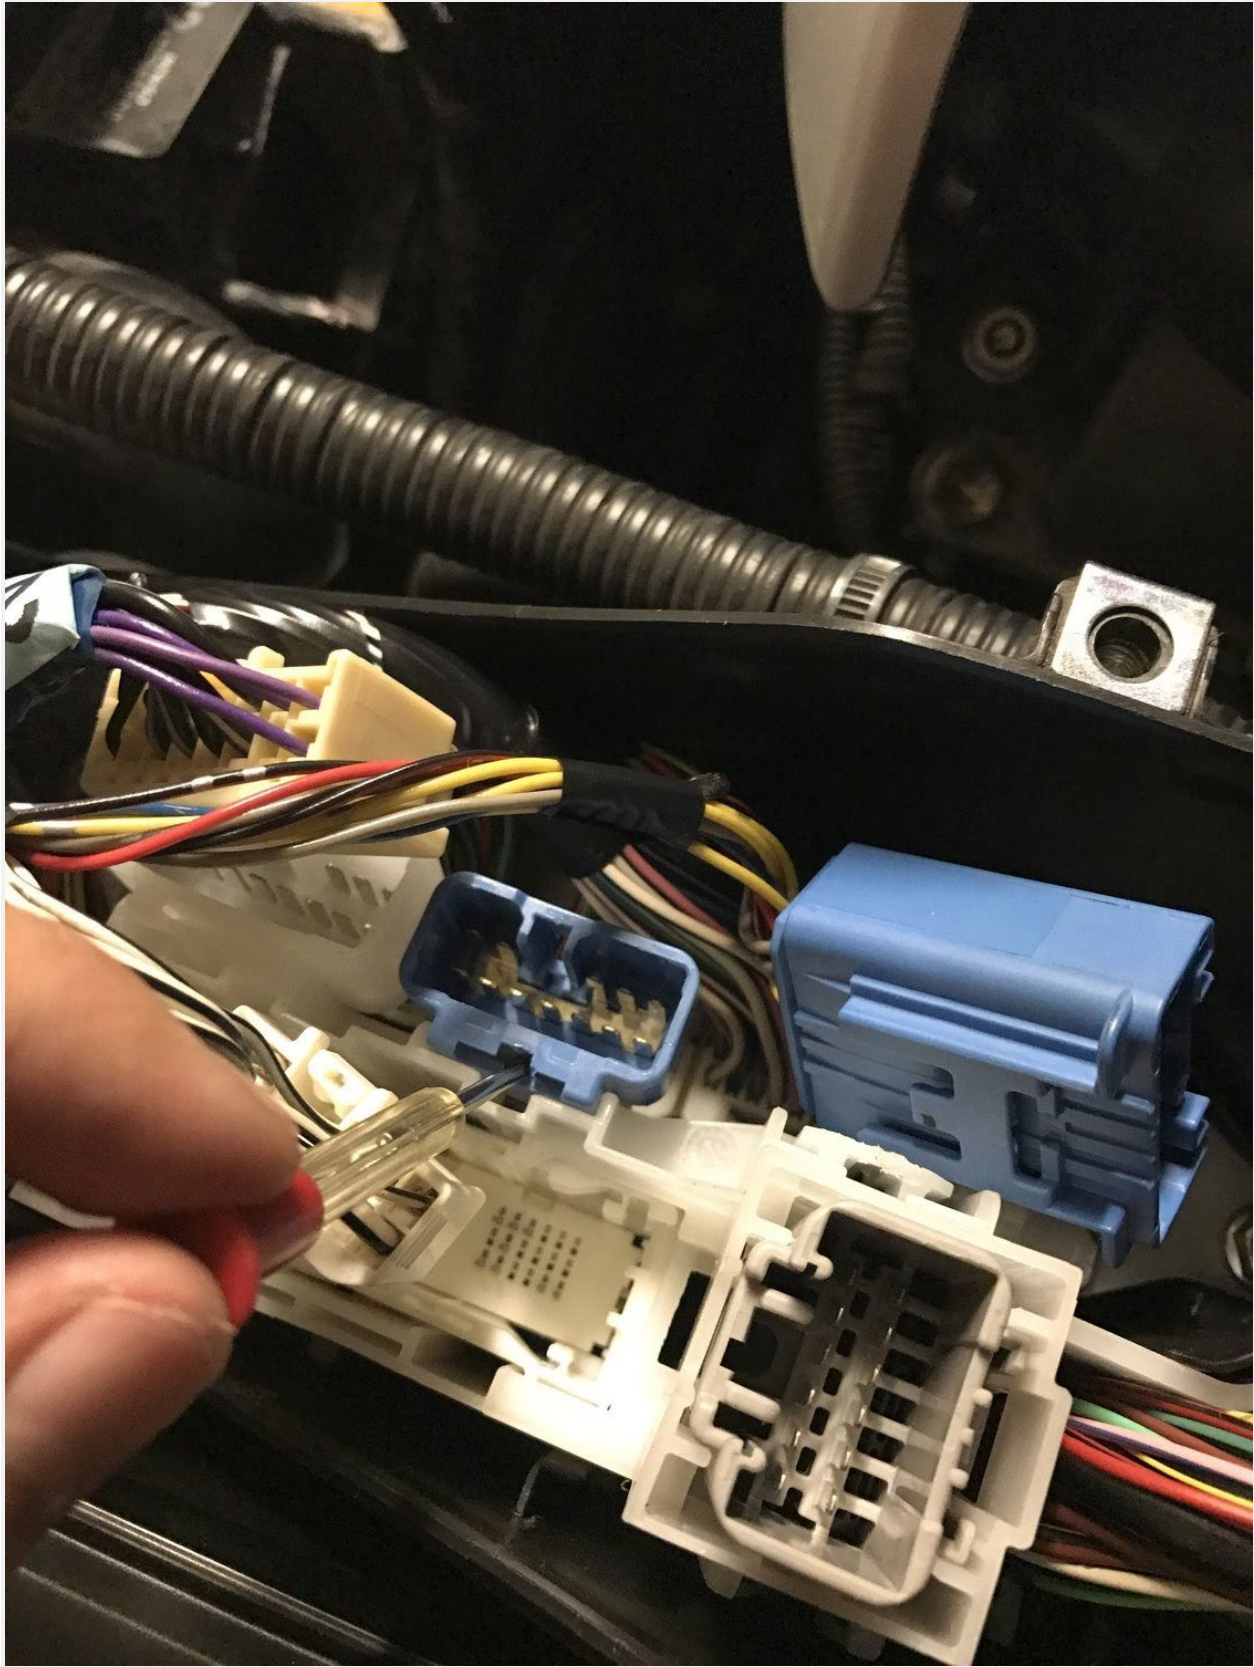

same for this one too!



then, pull all that 6 plugs



then you take the 2 bolts that hold the ecu



