



Disconnect the connector.

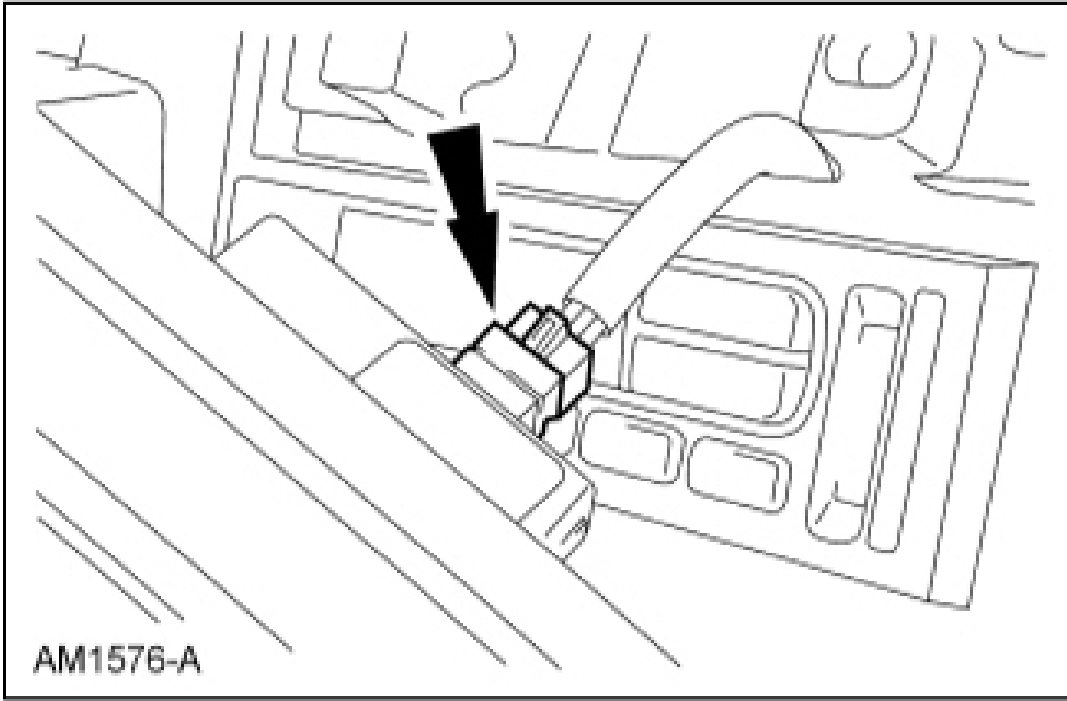

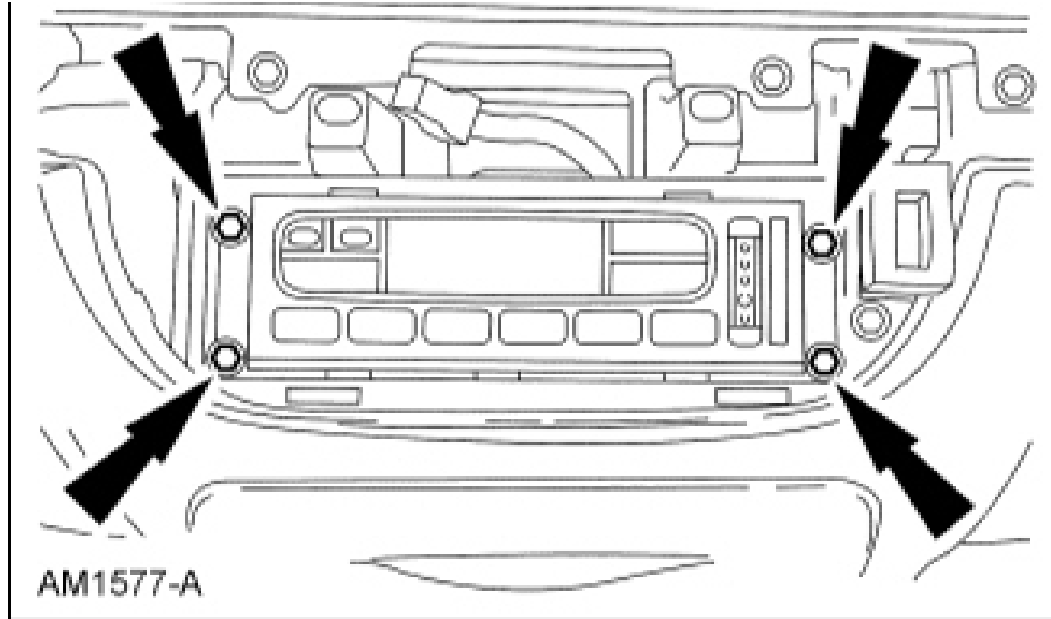

Remove the climate control assembly.

- Remove the nuts and the vacuum harness.
- Disconnect the wire harness connectors and remove the EATC module.

