

Removal Procedure (Kelsey Hayes Dodge)

1. Disconnect the negative battery cable.
2. Push the harness connector locks to release the 2 connectors from the ABS Module.
3. Remove the 4 screws attaching the ABS module to the hydraulic pump unit.
4. Remove the ABS module.

