

### Removing ABS Control Module:




The control module is located on the passenger side. There is a metallic box, which is the pump, with tubes coming out of it. The control module is attached to the front of the pump.



The first step is to remove the connector. The image above shows the connector with the locking mechanism in the closed position.

The image below shows the connector with the locking mechanism in the open position. To unlock the connector gently slide the locking mechanism toward the engine.

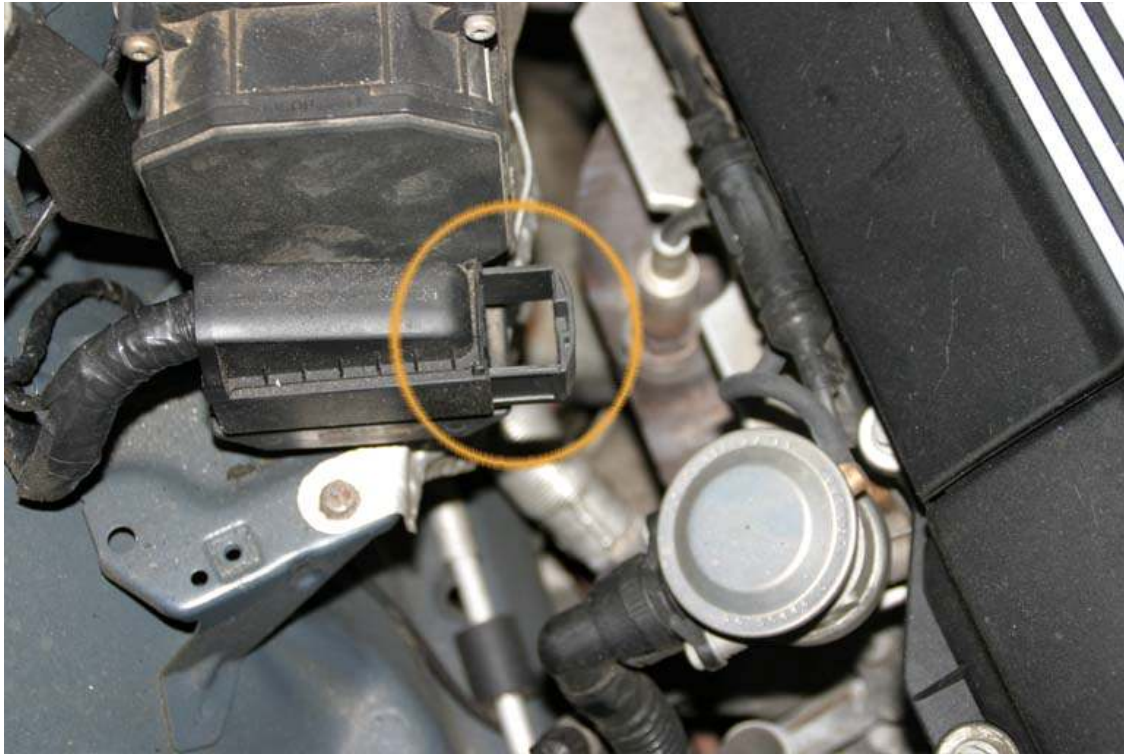

Carefully lift the connector straight up to disconnect it from the control module. The contact points are very thin pins and you'll want to make sure not to bend them.



Next use a #20 torx tip to remove the six bolts that mount the control module onto the pump. Once the bolts are removed, carefully slide the control module towards the front of the car. The arrows in the picture below give a reference of where the bolts are located. They were pretty easy to access.



Cover the surface where the control module was mounted with foil to prevent dirt and dust from getting in there.



The image below shows what the control module looks like inside. Very delicate so handle with care.

