

Hummer H2 Blower Motor Fan Resistor **Removal**

1. Take the plastic plate off below the glove box to expose the unit held on by three 7mm bolts.
2. Remove the bolts.
3. Disconnect the wiring harness.