

ISUZU VEHICROSS ABS MODULE REMOVAL

GO TO THE ABS UNIT LEFT CORNER UNDER THE HOOD.
REMOVE THE WIRING CONNECTOR BY PULLING KNOB TO RELEASE LOCK.
REMOVE THE 4 SCREWS SECURING THE MODULE TO THE PUMP WITH A TORX TOOL.
SEPERATE THE BLACK ABS MODULE FROM THE METAL PUMP.

