

The LCM is mounted in under the dash, above the gas pedal, in between the climate control and steering column. If you're having trouble locating it, place your keys in the ignition and open the driver's door and track down the module by listening to where the warning buzzer tone is coming from.

Open hood. Disconnect battery ground cable.

Locate the lighting control module above the accelerator pedal.

Disconnect the bottom two electrical connectors from lighting control module.

Remove the two screws keeping the LCM in the bracket and unclip it from bracket.

Remove LCM from the bracket and disconnect the remaining electrical connector.

To install, reverse the Removal procedure. Check the LCM for the proper operation.