

## CADILLAC CTS, SRX PCM REMOVAL INSTRUCTIONS

*\*\*\* Before you begin, disconnect the negative battery terminal. \*\*\**

The engine computer is located on the front passenger side of the engine compartment next to the fuse box.

- Release the two plastic tabs securing the wiring harnesses connectors.
- Use a 10mm socket to remove the 4 bolts on the corners of the PCM.
- Disconnect the ground cable using a T20 Torx bit.

