

The ABS module is located on the drivers side of the engine compartment.

Tools Required

- T20 Torx driver

Removal Procedure

1. Disconnect negative battery cable.

*Td6 (turbo diesel) models: Remove 2 screws securing fuel cooler intake duct to fuel cooler. Remove 2 bolts securing fuel cooler intake duct to bonnet locking platform. Remove fuel cooler intake duct.

*Td6 (turbo diesel) models: Loosen 2 nuts securing fuel filter clamp, release and place fuel filter and clamp assembly aside. Remove nut and 3 bolts securing fuel filter/cooler bracket assembly and move aside.

2. Carefully remove the electrical connector by pulling out the locking tab.

3. Remove the 6 torx screws that attach the module to the ABS module.

4. Remove the module.